

# CosyLifeStyle<sup>®</sup>

Manual  
for  
Remote Control  
for  
Bioclimatic Pergola  
Gazebo Génova

# Annex

## Remote Control



## 2 ZIP SCREEN SYSTEM SYNCHRONIZATION




The screen motor must be disconnected from the power supply if connected.




2.1 Plug in the motor of the screen to be synchronized, it will emit a sound and make a movement.

### 2.2 On the Remote

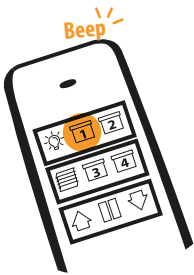

2.2

**Hold down** the button corresponding to the channel to be assigned to the desired screen (1, 2, 3 or 4), until it beeps. (Example: Channel 1)

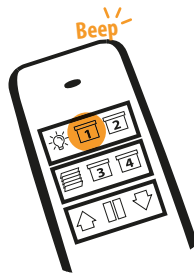

2.3

**Hold down** the button of the channel again until it beeps.




2.3

**Hold down** the UP or DOWN button for a few seconds until it beeps 4 times.


## 3 ZIP Screen Limits Setup (First Step)

3.1

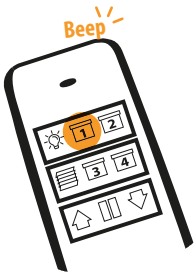


3.1.a

**Hold down** the button of the channel assigned to the screen until it beeps. (E.g. Channel 1)

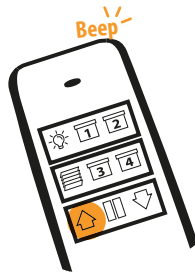

3.1.b


**Hold down** the UP button until it beeps.

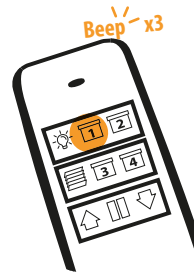

3.1.c


**Hold down** the button of the assigned channel (e.g. channel 1) until it beeps 3 times.

### 3.2 Set the Upper Limit

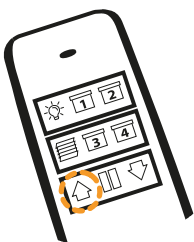


3.2.a

**Briefly press** the UP button until the screen starts to rise to the preset position (Upper limit).

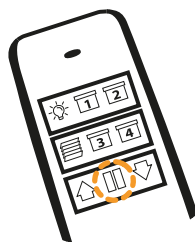

3.2.b

**Briefly press** the PAUSE button when the screen reaches the desired upper limit position.

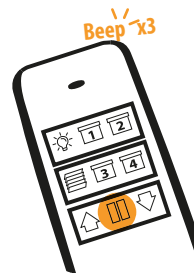


3.2.c

**Hold down** the PAUSE button until it beeps 3 times and makes a movement.

# Annex


## Remote Control

### 3.3 Set the Lower Limit

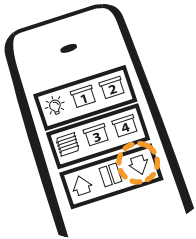

3.3.a

**Briefly press** the DOWN button until the screen starts to lower to the preset position (lower part).

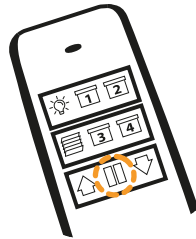

3.3.b


**Press** the PAUSE button when the screen reaches the desired lower limit position.



3.3.c


**Hold down** the PAUSE button until it beeps 3 times and makes a movement.

### End Limit Resetting - Screens

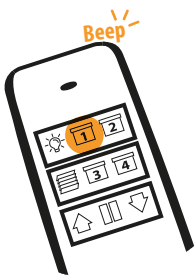

A

**Hold down** the button of the channel assigned to the screen you wish to reset.

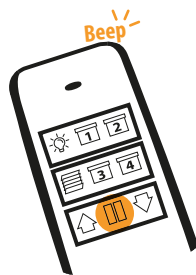

B

**Hold down** the PAUSE button until it beeps.



C

**Hold down** the button of the channel of the screen we are interacting with until it beeps 3 times and the screen makes a movement.

### Limit Setting Removal



A

**Hold down** the button of the channel associated to the screen to be reset.



B

**Hold down** the DOWN button until it beeps.



C

**Hold down** the button of the channel of the screen we are interacting with until it beeps 3 times and the screen makes a movement.

### Multiple Remote Control Programming on a Single Screen



A

On the main remote, **hold down** the button of the screen channel on which you want to associate the secondary remote, until it beeps.

Main remote control



B

**Hold down** this channel again until it beeps again.

Main remote control



C

On the secondary remote, **hold down** the button of the channel to be associated with the desired screen until it beeps 3 times.

Secondary remote control

## Multiple Screens Setup on a Single Channel



The screen motor must be disconnected from the power supply if connected.



- 2 Connect the motor of the screen we want to synchronize to the power supply, it will emit a sound and make a movement.



A

**Hold down** the button of the channel of the screen on which you want to act until it beeps.



B

**Hold down** the button of the channel of the screen in which you are interacting until it beeps.



C

**Hold down** the UP or DOWN button until it beeps 3 times.

- 3 Repeat step 2 with the following screens, taking into account that the motor of the screen to be linked must be disconnected from the power supply.

## Contact information

Austria



Belgium



Croatia



Denmark



Estonia



Finland



France



Germany



Ireland



Italy



Latvia



Lithuania



Nederland



Norway



Poland



Portugal



Spain



Sweden



Switzerland



UK

